MELA Sensortechnik GmbH 07987 Mohlsdorf-Teichwolframsdorf · Germany Tel. +49 3661-62704-0 · Fax +49 3661-62704-20 E-Mail: mela@melasensor.de · Internet: www.galltec-mela.de





# Product info sheet Condensation detector to prevent the building of condensed water FAS 250VAC

#### **Type Survey**

Тур	Order no.	Contact type
FAS 250V AC	4208101Q0000016	Fixed value 80% Changeover switch with silver contacts
FAS 250V AC	4208A01Q0000016	Fixed value 80% Changeover switch with gold contacts

## **Technical Data**

measuring element .....

Polyga <sup>®</sup> -meas	suring element, water resistent
influence of temperature	
ref. to 23 °C	≤ +/- 0.2 % r.h. / K
typ. response time t <sub>50</sub> at v=2m/s	1.2min
50	

## microswitch with silver contacts

aay awitahing conceity

max. switching capacity	
alternating voltage	
ohmic load	5A 250V AC
inductive load (power factor > 0,8)	. 1A 250V AC
direct current (e.g.)	
ohmic load	. 3A 24V DC
inductive load (power factor > 0,8)	2A 24V DC
minimum switching current	100mA <sup>1)</sup>

### optional microswitch with gold contact

max. switching capacity	100mA 250V AC
minimum switching current	1mA <sup>1)</sup>

<sup>1)</sup> not relevant when switching high resistance loads (>10kOhm) e.g. logic levels

#### Please consider the Notes on voltage

allowable ambient temperature	0.60°C
maximum admissible ambient humid	lity95%rh
air-speed	
installation altitude	. ≤ 4.000m above sea level
mounting position	as you like
contacting	connecting terminals

purpose of sensing control ..... humidity sensing control nominal cross-sectional area of the conductors.....

up to 2.5 mm <sup>2</sup> for fixed wiring conductors (single wire)
up to 1.5 mm <sup>2</sup> for flexible cord conductors (fine-stranded)
type of protective earth conductor bow terminal
action 1.C.L
degree of pollution 3
rated impulse voltage 4kV
ball indentation test for temperature
protective system IP20
dimensions 85x55x33mm
weight approx. 92 g

The PCB module with Polyga® sensing element is arranged on a base plate so the sensing element is located in close proximity to the base plate. Given the protection of the enclosure, moisture close to the dew point can form on the inside. The base plate is in contact with the cooling pipe and transmits the cooling energy to the sensing element. The switching point can be adjusted on the inside. It is necessary to adjust the switching point to suit the ambient conditions. The microswitch switches a changeover contact at zero volt. The FAS does not require a supply voltage or auxiliary energy.

### Adjusting the switching point

Description of the detector

The switching point is set and fixed at 80% RH. The fixation can be released after opening the housing by turning the rotary knob and then the switching point can be adjusted. Tampering with the internal parts voids the warranty.


applied directives / standards low-voltage directive 2014/35/EU EMC directive 2014/30/EU DIN EN 60730-1:2012-10 DIN EN 60730-2-13:2008-09


#### Notes on voltage

The measurement location of the humidity controller should be selected such that there is no build-up of condensate on or in the device. There is a risk of voltage arcing in the event of water condensation on the microswitch or connecting terminals which might destroy the controller. In the event of water condensation. Particularly operating with a voltage higher than 48V may endanger people. The humidity controller should be used up to a maximum of 95%rh.

This information is based on current knowledge and is intended to provide details of our products and their possible applications. It does not, therefore, act as a guarantee of specific properties of the products described or of their suitability for a particular application. It is our experience that the equipment may be used across a broad spectrum of applications under the most varied conditions and loads. We cannot appraise every individual case. Purchasers and/or users are responsible for checking the equipment for suitability for any particular application. Any existing industrial rights of protection must be observed. The perfect quality of our products is guaranteed under our General Conditions of Sale. Issue: 08/2024 FAS-250VAC-Q16. Subject to modifications.

### **Connection diagram**

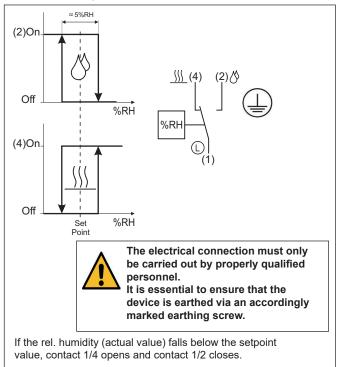

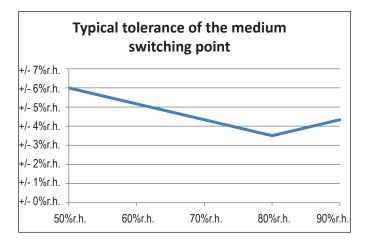


1-point-adjustment at 80 % r.h. / 23 °C Long-term drift:  $\leq \pm 1\%$  r.h. p.a.

### Typical switching differential with typical tolerance

Setpoint value humidity	Switching differential	Tolerance
50 % r.h.	5 % r.h.	+/- 1,5 % r.h.
60 % r.h.	4 % r.h.	+/- 1,5 % r.h.
70 % r.h.	4 % r.h.	+/- 1,5 % r.h.
80 % r.h.	3 % r.h.	+/- 1 % r.h.
90 % r.h.	3 % r.h.	+/- 1 % r.h.

Contact with the measuring mechanics of the device nullifies the warranty.



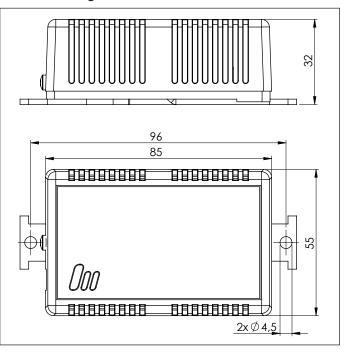

### Installation information

If condensation formation is to be monitored in a room, the dampest position must first be identified. The coldest position will not necessarily be the dampest (see hx diagram). It should also be taken into account that changes in the room could result in another place becoming the dampest. The FAS 250VAC condensation detector must be installed so that good thermal contact with the chosen position is achieved. Care should also be taken to ensure that any condensation which may form is not able to get into the enclosure. The detector is secured using the ties provided which are suitable for pipes up to 50 mm Ø. The enclosure must not be exposed to any external heat source, as this could result in incorrect measurements.

An installation location should be selected where a representative humidity measurement is guaranteed. This means the ambient air must be able to flow freely to the sensing element inside the enclosure via the vents. The air flow around the FAS 250VAC should be at least 0.2 m/second.

#### Maintenance

The measuring element is maintenance-free in pure ambient air. Aggressive media containing solvent can cause measuring errors depending on the type and concentration. Deposits which eventually form a water-repellent film over the measuring element are harmful (such as resin aerosols, lacquer aerosols, smoke deposits etc.).

The warranty does not apply to defects or damage resulting from inappropriate use or if internal components have been tampered with.